
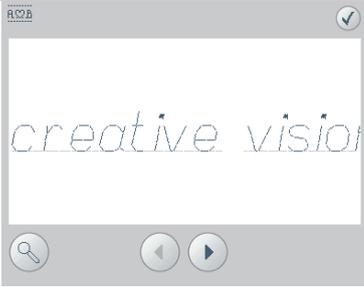
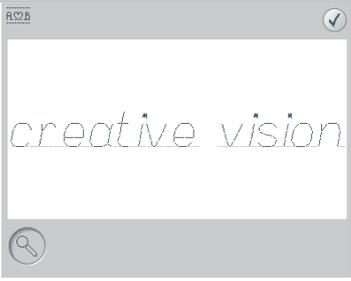
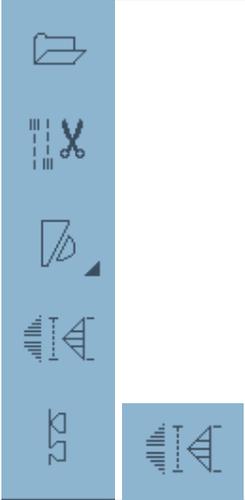


2

Name

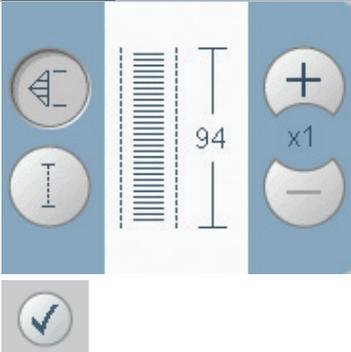

1	Task bar. Sequencing	
2	Selection menu.	
3	Touch.... • Fonts • Block alphabet	
4	Type creative vision. Use the lower case icon to type lower case letters.	
5	Preview	

<p>6 See the programmed sequence in a horizontal view.</p> <p>Use the arrows to move forward or backward in the sequence.</p>	
<p>7 Touch the magnifying glass to see the whole sequence.</p> <p>(Makes it easier to check spelling)</p>	
<p>8 Touch OK to close the preview</p>	
<p>9 The information field shows the length of the programmed sequence.</p>	
<p>10 Touch sequencing to toggle to sewing mode.</p>	
<p>11 Touch sewing programs in the Options bar.</p>	
<p>12 Touch....</p> <ul style="list-style-type: none"> • Single stitch • Make sure it is set to "1" • OK 	

<p>13 To save the sequence, touch the file folder in the options bar.</p>	
<p>14 Touch the open folder.</p>	
<p>15 Touch Rename. Long touch Delete to erase the new stitch.</p>	
<p>16 Type in a name for your sequence: "creative_vision".</p>	
<p>17 OK</p>	
<p>18 OK</p>	
<p>19 Sew out the "creative_vision" sequence. Make sure you follow the recommendations in the recommendation field about presser foot and stabilize, etc.</p>	