

Maxi stitches Leaves and flowers

- Side Positioning -



1

Set your machine to Embroidery Mode


Selection menu.



2

Touch...

- Touch Built-in Stitches
- category 5; Maxi stitches
- subcategory 2; Leaves and Flowers
- stitch number 9

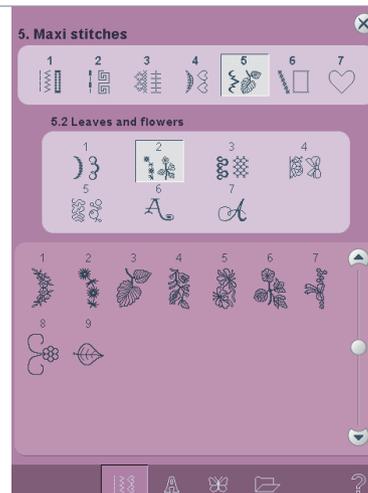


3

Touch Hoop Selection.



4


Select creative™ TEXTURE HOOP.

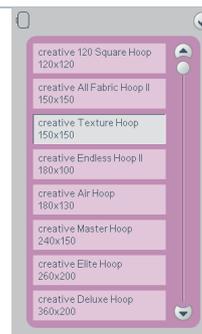

5 Touch Shaping.



6 Select Shape Circle clockwise (third icon from the top).

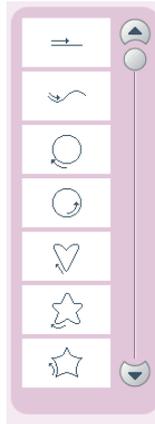


7 Touch Select Control Points.




8 Touch Outer Control Points.



 
9 Touch the attraction slider and adjust the attraction to 100%.



 10 Touch All Control Points to activate all points again.
Touch Ok to confirm and close the Control points pop-up.



11 Touch the shape (in the embroidery field) and drag and drop it to make the shape larger.
Fine tune with the Wheel.
Set the size to 126x126.

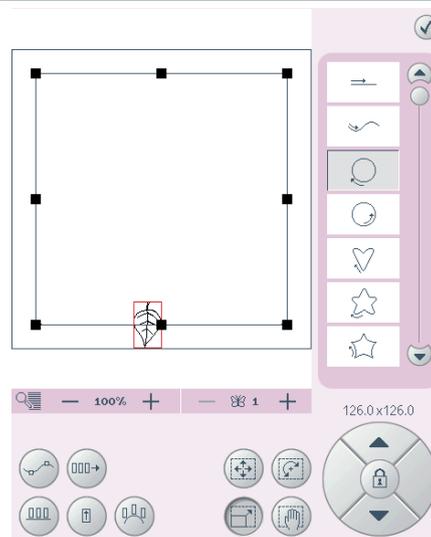

12 Touch Duplicate last to add more stitches to the Shape.



Set it to 32.


13 Touch OK to close the Shaping pop-up.



14 Touch Thread Color Edit



15 Touch Color block 1:1.

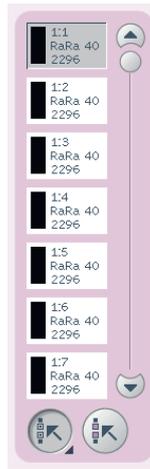

16 Touch Select equal colors.



17 Touch Quick color change.
Select a color you like for the leaves.
Touch OK to confirm your color choice to close the Quick color change pop-up.



18 Touch OK to confirm your Color changes and to close the Thread edit pop-up.



19 Touch Duplicate.



20 Touch in the center of the Wheel to center the new shape in the hoop.



21 Touch Shaping.



22 Touch Select side positioning.




23 Touch the third side positioning icon to put all designs on the shape up-side-down.



24

Touch the shape (in the embroidery field) and drag and drop it to make the shape smaller.
Fine tune with the Wheel.
Set the size to 57x57.

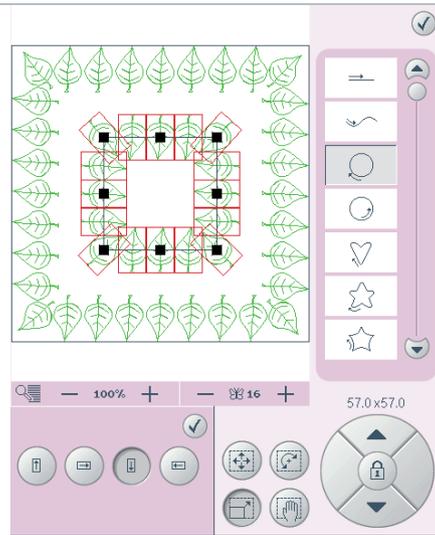

25

Touch Delete last to remove some stitches in the Shape.
Set it to 16.



26

Touch OK to close the Shaping pop-up.



27


Touch Selection menu.



28

Touch...

- category 5; Maxi stitches
- subcategory 3; Art stitches
- stitch number 13

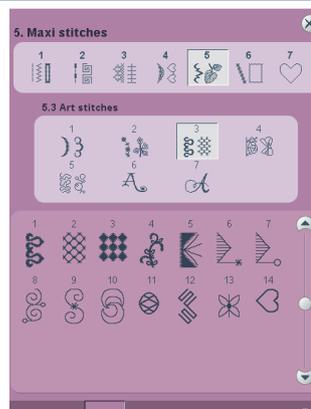


29

Touch Shaping.



- 30 Select Shape Circle clockwise (third icon from the top).

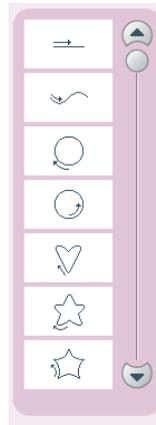


- 31 Touch Select Control Points.




- 32 Touch Outer Control Points.



 
- 33 Touch the attraction slider and adjust the attraction to 100%.



 - 34 Touch All Control Points to activate all points again. Touch Ok to confirm and close the Control points pop-up.



- 35 Touch the shape (in the embroidery field) and drag and drop it to make the shape smaller. Fine tune with the Wheel. Set the size to 91.5x91.5

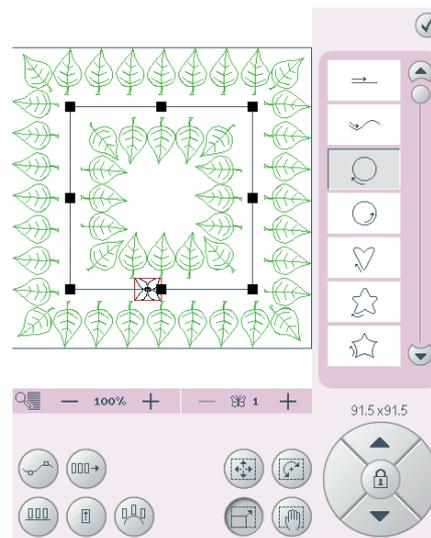

- 36 Touch Duplicate last to add more stitches to the Shape.



Set it to 28.


- 37 Touch OK to close the Shaping pop-up.



38 Touch Thread Color Edit



39 Scroll down to Color block 3:1 .
Touch Color block 3:1 .

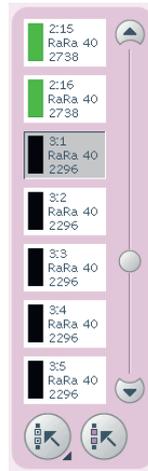


40 Touch Select equal colors.



41 Touch Quick color change.
Select a color you like for the flowers.
Touch OK to confirm you color choice to close
the Quick color change pop-up.



42 Touch OK to confirm your Color changes and to
close the Thread edit pop-up.

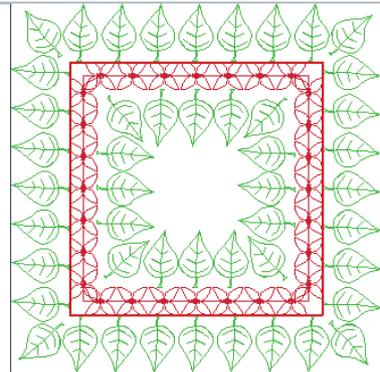

43

- Hoop your fabric
- Place ribbons on top and secure with clips.
- Attach the creative™ TEXTURE HOOP on the embroidery arm.
- Touch Embroidery toggle icon to move to embroidery Stitch out mode.
- Start to embroider.

