

# Clock

- Design Angle -




1 Set your machine in Embroidery Mode .



2 Touch Hoop selection.




3 Select creative™ DELUXE HOOP.

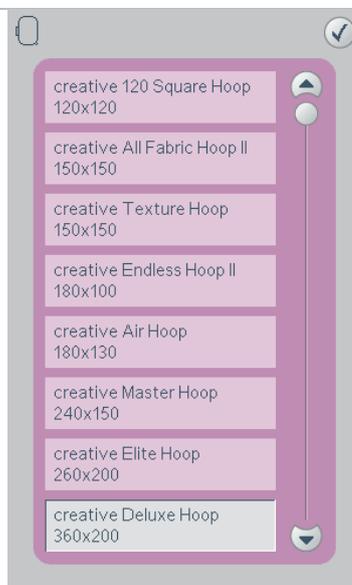

4 Selection menu



5 Touch...  
• Fonts  
• Graphite 20

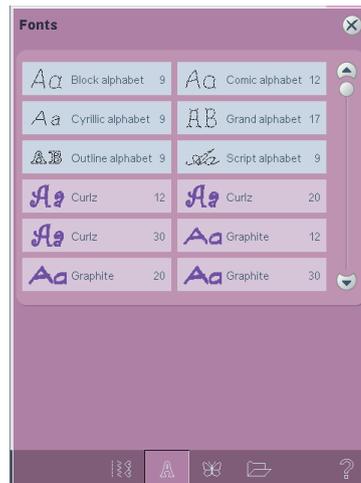

6 Touch "1" in the Font Style menu to open the numbers window.



7 Type in  
123456789101112



8 In the Task bar touch on the sequencing icon to toggle back to embroidery screen.



9 Touch Group to ungroup all the numbers.



10 Touch Multi-select to deactivate.




11	Touch "1" of the two numbers in "10"	
12	Touch Multi-select to activate	
13	Double-click on "0" to select	
14	Touch Group to put "1" and "0" in the same group to create "10".	
15	Touch the first "1" of the two numbers in "11"	
16	Touch Multi-select to activate	
17	Double-click on the second "1" to select	
18	Touch Group to put the first "1" and the second "1" in the same group to create "11".	
19	Touch "1" of the two numbers in "12"	
20	Touch Multi-select to activate	
21	Double-click on "2" to select	
22	Touch Group to put the "1" and the "2" in the same group to create "12".	
23	Long-touch on Multi-select to select everything on screen	

## 24 Touch Shaping.



## 25 Select Shape Circle Clock-wise (third icon from the top).

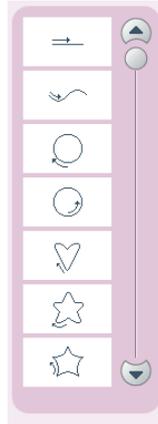


## 26 Touch Select Design Angle to put all numbers horizontal.



## 27

Touch on screen and drag to make "the clock" a bit larger.

Fine tune with the Wheel.  
Set the size to 182x182.

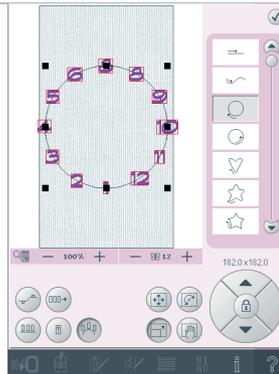


## 28

Touch rotation. And drag "the clock" on screen to put the #12 at the top of the clock.

Fine tune with the Wheel.  
Set it to 210 degrees.

Touch OK to confirm your shaping and to close the pop-up.

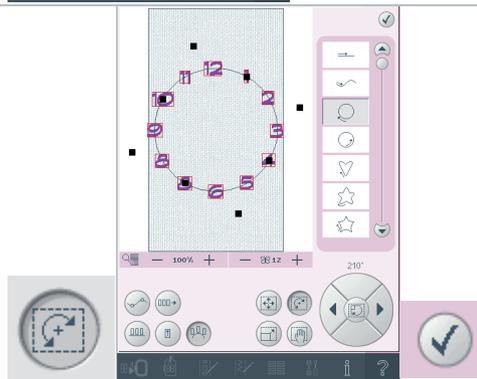

## 29

- Hoop your fabric
- Attach the creative™ DELUXE HOOP on the embroidery arm.
- Touch Embroidery toggle icon to move to embroidery Stitch out mode.
- Start to embroider.

